

## How it's Done Custom Style to Normal Memory A B or C

Custom Styles can be brought into normal Composer Memories A, B or C as follows  
*Press button Program Menu – then Composer Button next to the screen – then press button, - Custom Style Copy. Now you have a screen similar to illustration*

| Custom Style Copy |           |                           |
|-------------------|-----------|---------------------------|
| FROM              |           | TO                        |
| Memory Bank: A    |           | Custom Style: 1           |
| 16 Beat           | ====>     | Easy Classical            |
| RHYTHM : 16 Beat  |           | RHYTHM : Classical Ballad |
| MEMORY BANK       |           | CUSTOM STYLE              |
| Up Arrow          |           | Up Arrow                  |
| Down Arrow        | DRIECTION | Down Arrow                |

Now Press Direction Button and the screen becomes like the one below

| Custom Style Copy         |           |                  |
|---------------------------|-----------|------------------|
| FROM                      |           | TO               |
| Custom Style: 1           |           | Memory Bank: A   |
| Easy Classical            | ====>     | 16 Beat          |
| RHYTHM : Classical Ballad |           | RHYTHM : 16 Beat |
| MEMORY BANK               |           | CUSTOM STYLE     |
| Up                        |           | Up               |
| Down                      | DRIECTION | Down             |

Now all you have to do is to select the custom style you wish to copy to Memory A, (B or C) this will also bring the one touch play settings for you to use if you wish. Or you can use your own Voice setting in panel Memory. Colin